



REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-10-01	AC
P2	Lengthened inboard to meet the steering lock stop (2026-10-02)	2026-10-02	AC
P3	Shortened inboard to 104 mm; forks turned to trail (FTK-DEC-001)	2026-10-03	AC

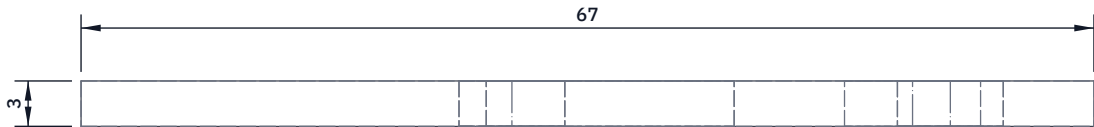


TOP VIEW
Scale 2:1; looking down (along -Z)

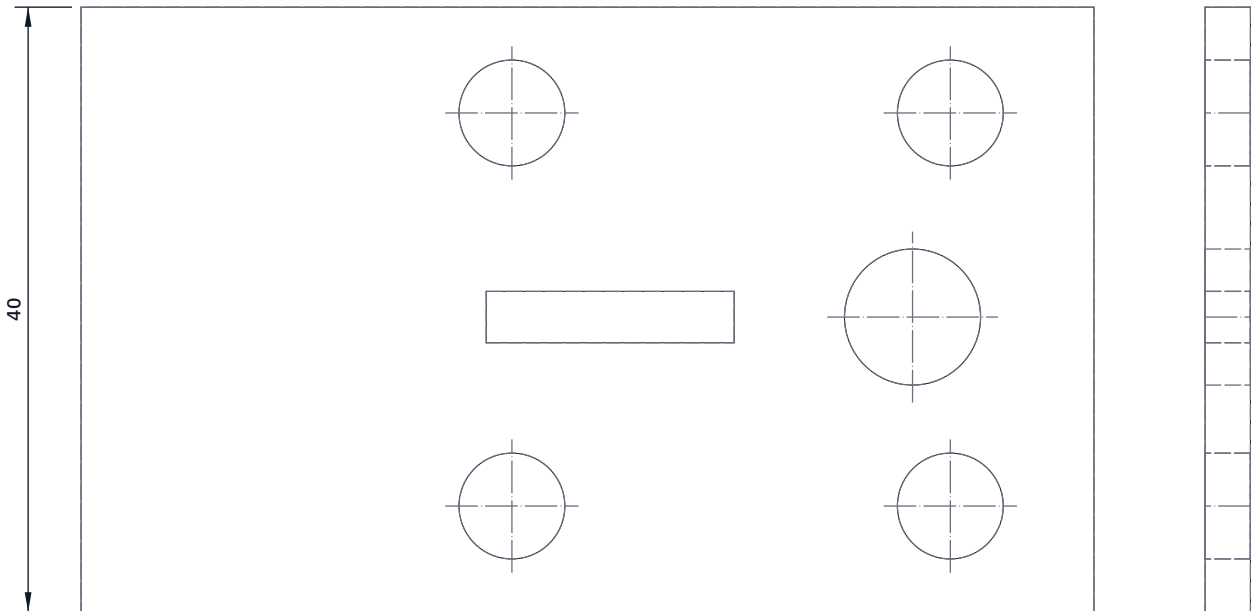

FRONT VIEW
Scale 2:1; looking at the front (along +Y)

RIGHT VIEW
Scale 2:1; looking at the right side (along -X)

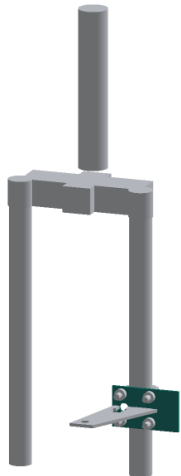

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Make 2; turn one over for the right. Plate 67 x 40 mm.

Four 7 mm holes for two M6 U-bolts, 29 mm apart across and 26 mm apart up and down; one slot and one 9 mm hole for the arm.

The plate runs 43 mm in from the leg's centre: at full lock its front inboard corner meets the lock stop (FTK-DWG-124).

Fit: the plate sits behind the inboard fork leg, which trails the steering axis by 35 mm; the U-bolts go round the leg from the front and pull the plate against it; the long end points in.

Check: the U-bolts' legs pass through without forcing.

FLATTRIKE				github.com/BoujeeEnjinia1701/flattrike			
FlatTrike steering arm clamp plate (make 2): making sketch							
DRAWING NO. FTK-DWG-119			REV P3		SHEET 1 of 1		SIZE ANSI B
SCALE 2:1	UNITS mm	PROJECTION 		DATE 2026-10-03		DRAWN Amish Chadha	
MATERIAL / NOTES 3 mm S235JR or A36 steel plate, laser or waterjet cut							
Licensed CERN-OHL-S-2.0 · Design Molecule Lab · designmolecule.com						Generated from cad/src; do not edit by hand	